

MANUAL


Digital Nano Ceramic Hair Straightener Brush USE and Care Guide

READ ALL INSTRUCTIONS BEFORE USING.KEEP AWAY FROM WATER.



Ceramic Shine Straightener brush
Sleek Solon Performance

DESCRIPTIONS

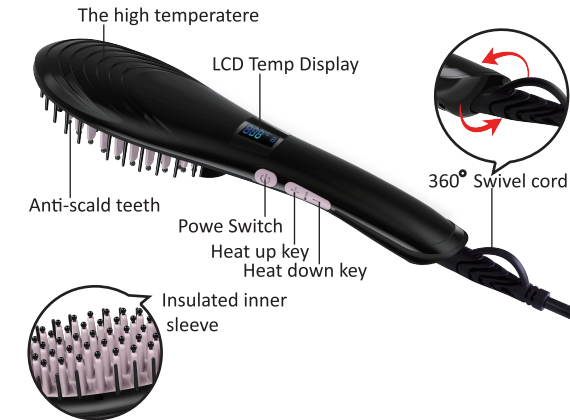

- 1: Hair Straightener Brush
- 2: Model No: KS301
- 3: 110V~240V, 50/60Hz, 45W Max

WARNING
KEEP AWAY FROM CHILDREN

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off. To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by or near children or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual.

FEATURES

- Max 230°C (450°F) salon temperature performance, ready to use in 15 seconds
- Instant heat-up: 1 minute heat up to 180°C (365°F), 8 seconds a silky straight hair basic done
- Constant Heat: auto keep constant temperature at 180°C (360°F) for all types of hair
- Customized set 210°C (410°F) for natural texture hair, 230°C (450°F) for thick or wavy hair, effortless and efficient straightening styling
- Convenient Centigrade to Fahrenheit convert: press "+" "-" button at same time 100% ceramic heating plates, ball shape bristle design great for hair root touch straightening
- Ionic technology moisturizing and hydrating care for a frizz-free finish
- 45W power consumption, dual-voltage for worldwide use 110V~240V
- Without any setting after 5 seconds, control buttons will be locked up, then press 2 times power button to unlock temperature control buttons
- Auto shut off

INSTRUCTIONS FOR USE

- Ensure hair is dry and combed through.
- Press the button 'Power Switch' to switch on, please press for 3 seconds.
- Press '+' '-' button to select the desired straightening temperature, using the symbols shown as a guide:
 - = 360°F (180°C)
 - = 410°F (210°C)
 - = 450°F (230°C)
- Separate a section of hair.
- Place the Hair Straightener Brush close to the roots of selected hair, hold the hair end firmly and brush down the length of the hair, from root to tip.
- Repeat as necessary.
- Allow the hair to cool down before other styling application.
- After use, press the button 'Power Switch' to switch off, please press for 3 seconds and unplug the appliance.
- Please wait until cooling down to pack up the Hair Straightener Brush

AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, then it will automatically switch off. If you wish to continue using the appliance after this time, simply press the 'Power Switch' button to turn the power on.

CLEANING & STORAGE

Ensure the appliance is completely cool before placing inside the storage pouch

Always place the appliance on the heat resistant mat while styling hair to protect work surfaces

Use small fiber brush or cleansing to clean the Hair Straightener Brush

SAFETY CAUTIONS

This appliance should only be used as described within this instruction manual. Please retain for reference.

WARNING! Polythene bags over a product may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. These bags are not toys.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels. Do not immerse the appliance in water or other liquids. Do not use the appliance in the bathroom.

Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged. In the event of damage, contact with us.

Do not use the appliance if the power cord is damaged. In the event of damage, discontinue use immediately. If the power cord is damaged it must be replaced by the manufacturer.

Do not leave the appliance unattended when switched on or plugged in.

Do not place the appliance on any heat sensitive surface while in operation.

Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.

GUARANTEE

This Hair Straightener Brush is guaranteed for consumer use for 1 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorized persons. This guarantee in no way affects your statutory rights.